 




OPERATOR'S MANUAL

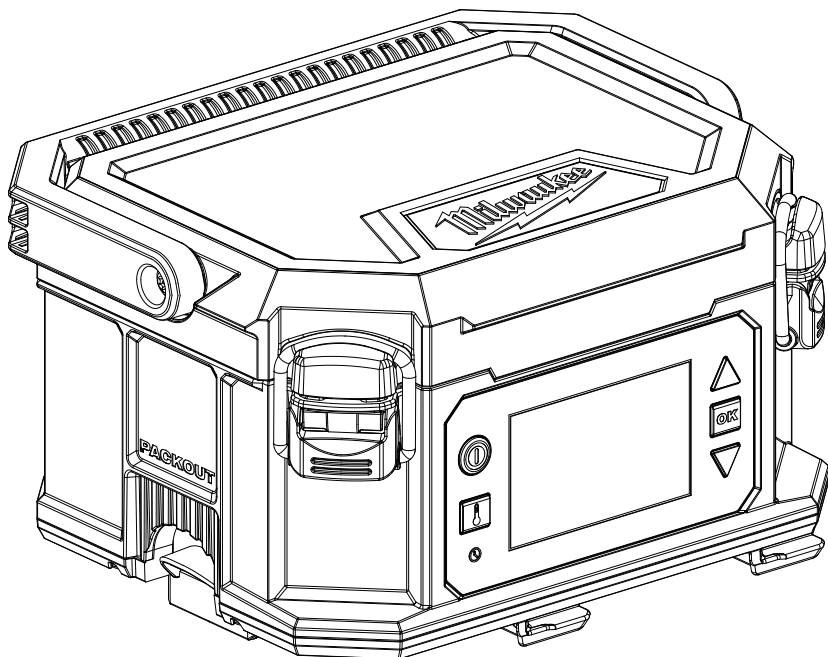

Cat. No.

M18 PHLB

M18 PACKOUT HEATING LUNCH BOX



WARNING



To reduce the risk of injury, user must read and understand operator's manual.

SPECIFIC SAFETY RULES FOR WARMERS

The product is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- Children should be supervised not to play with the product.

⚠ WARNING Always remove the battery pack any time the tool is not in use or when cleaning.

- Warmer is not intended for cooking food. Warmer is intended for reheating food; use only as instructed.
- Warmer does not maintain hot or cold food-safety temperatures.
- Heating performance may vary based on environmental conditions, battery capacity, battery charge level, temperature setting, food types, food volume, etc.
- Warmer and contents get hot! To avoid injury, take care when operating especially when handling container. Use caution when handling. Do not touch hot surfaces. Use the edges of the container lid latches when removing the container from the body of the warmer. Do not touch heating plate when in use. Failure to follow these instructions can result in burns.
- Do not allow persons with reduced physical, sensory, or mental capabilities or unfamiliar with these instructions to operate the warmer.
- Children should not use the warmer as a toy and must be supervised by adults.
- Only use with provided container. Do not place food directly in the body of the warmer.
- Container gets hot! Setting hot container on surfaces may cause damage.
- Do not store or place anything that may damage the heating plate of the warmer.
- Keep the area between the container and heating plate clean and clear of debris.
- Always latch tool lid closed and close all edges of the container lid onto container when in use.
- Do not submerge tool in water.
- Do not place tool or tool lid in dishwasher.
- Container, container lid and gasket are dishwasher safe.
- Do not microwave tool or container.
- Domestic use only.
- Use the tool on a level surface to avoid spills.
- Do not mount on PACKOUT wall plates.
- Do not mount on or in a vehicle or trailer

- Always use common sense and be cautious when using tools. It is not possible to anticipate every situation that could result in a dangerous outcome. Do not use this tool if you do not understand these operating instructions or you feel the work is beyond your capability; contact **MILWAUKEE®** Tool or a trained professional for additional information or training.
- Maintain labels and nameplates. These carry important information. If unreadable or missing, contact a **MILWAUKEE®** service facility for a replacement.

ADDITIONAL BATTERY SAFETY RULES

⚠ WARNING To reduce the risk of fire, personal injury, and product damage due to a short circuit, never immerse your tool, battery pack or charger in fluid or allow a fluid to flow inside them. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach-containing products, etc., can cause a short circuit.

⚠ WARNING Do not charge non-rechargeable batteries.

 
- When the battery leaks, remove it from the product, stop using it, and contact relevant agencies for recycling.
- Do not expose the product or battery to excessive temperatures.
- Rechargeable batteries are to be removed from the product before being charged.
- If the product is to be stored unused for a long period, the batteries should be removed.
- Do not use modified or damaged batteries.

SAVE THESE INSTRUCTIONS.

SPECIFICATIONS


Cat. No. **M18 PHLB**
Volts..... 18 V DC
Battery Type M18™(Li-Ion battery)
Charger Type..... M18™
Heating Temperature Range74°C to 96°C
Container Capacity..... 1125 mL
Container (3 pack) Cat. No. 49160203
Recommended Ambient
Operating Temperature..... 0°C to 51°C
Charging Temperature 5°C to 40°C

FUNCTIONAL DESCRIPTION

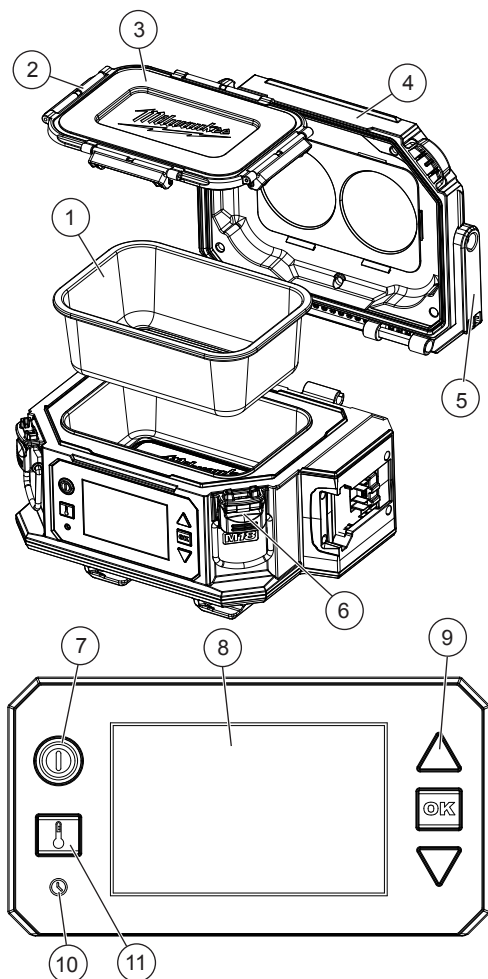

1. Container
2. Container lid latch
3. Container lid and gasket
4. Tool lid
5. Carry handle
6. Tool lid latch
7. Power button
8. Display
9. Selection arrows and confirmation OK button
10. Set Real Time Clock button
11. Adjust heat setting level & Heat Now Start/Stop button

 Display

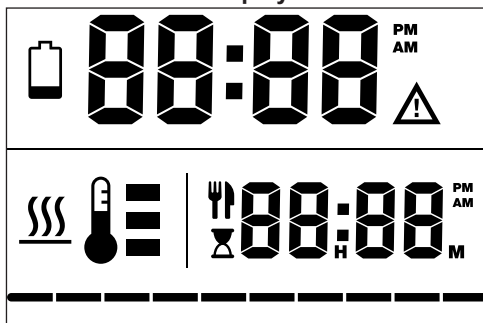

Icon	Description
	Solid - Low battery Flashing - Battery charge level unable to complete entire 2 hour heating.
	Real Time Clock
	Overtemp warning. Replace battery or allow tool to cool.
	Heating is active
	Heat level indicator
	Target Meal Time
	Meal Time Countdown
	Progress bar - Segments light up red (from left-to-right) as a percentage of the time between heating beginning and Target Meal Time. Bar turns green when heating cycle is complete.

SYMBOLGY

	Volts
	Direct Current
	Do not expose battery to liquids
	Read Operator's Manual
	Power button
	Adjust heat setting level & Heat Now Start/Stop
	Set Real Time Clock
	Up
	OK
	Down
	Do not use in microwave
	Dishwasher safe
	Not Dishwasher safe
	Food Safe Material
	Do not mount on or in a vehicle or trailer
	Safety Alert Symbol
	CAUTION Surface is hot. Avoid Contact.
	The product is only suitable for indoor use. Never expose the product to rain.
	Class III appliance
	Regulatory Compliance Mark (RCM). This product meets applicable regulatory requirements.
	Do not dispose of electric tools together with household waste material. Electric tools and electronic equipment that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.

ASSEMBLY

WARNING Always remove the battery pack any time the tool is not warming or in use.

Inserting/Removing the Battery

To **insert** the battery, slide the pack into the body of the tool. Make sure it latches securely into place. To **remove** the battery, push in the release buttons and pull the battery pack away from the tool.

WARNING Recharge only with the charger specified for the battery. For specific charging instructions, read the operator's manual supplied with the charger and battery.

Setting Real Time Clock

1. Press and hold  to turn on the warmer.
 2. Press  to enter clock mode.
- NOTE:** Press and hold  to toggle between 12-hour (AM/PM) and 24-hour time format.
3. Use the  and  buttons to set the hours then press **OK** to continue.
 4. Use the  and  buttons to set the minutes then press **OK**.

OPERATION

WARNING Always remove the battery pack any time the tool is not in use or when cleaning.

- Wash container, container lid and gasket before first use. Separate container, container lid, and gasket for a thorough cleaning. Allow all parts to dry before assembling. Reinstall gaskets before use. Do NOT use bleach, chlorine, or abrasive cleaners.
- Warmer is not intended for cooking food. Warmer is intended for reheating food; use only as instructed.
- Warmer does not maintain hot or cold food-safety temperatures.
- Heating performance may vary based on environmental conditions, battery capacity, battery charge level, temperature setting, food types, food volume, etc.

Turning the warmer on/off

1. To turn **on** the warmer, press and hold .
2. To turn **off** the warmer, press and hold .

 
Setting Target Meal Time

Set the meal time for when you want to eat. The warmer will automatically turn on 2 hours prior to meal time and heat your food until meal time is reached. The warmer will remain on for 30 minutes after meal time before turning off automatically.


NOTE: Target Meal Time setting is stored from last usage.

1. Turn on the warmer.
2. The meal time hours setting will blink by default.
3. Use the  and  buttons to set the desired hours then press **OK** to continue.
4. Use the  and  buttons to set the desired minutes then press **OK**.

5. The meal time setting will display.

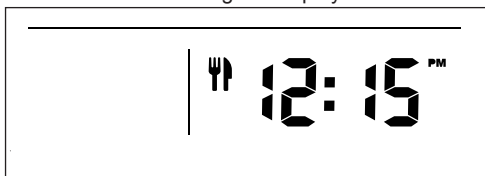

 6. Two hours prior to meal time setting, the warmer will automatically turn on and begin heating.
7. The display changes to focus on the upcoming meal time:

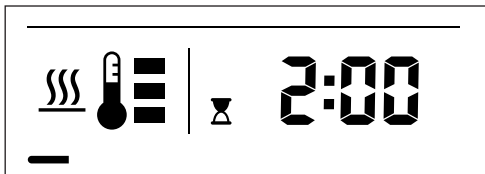

- The heating indicator will turn on and blink.
 - The hourglass indicator will turn on and the 2 hour heating timer countdown will begin.
 - The progress bar indicator will light red and gradually grow from left to right equal with the heating timer countdown.
8. When heating cycle is complete the progress bar will turn green.
9. The display will remain on for 30 minutes before turning off automatically.
10. **CAUTION** **Warmer and contents get hot! Use caution when handling.**
Do not touch hot surfaces. Use the edges of the container lid when removing the container from the body of the warmer.
11. To cancel meal time at anytime, press and hold .

Heat Now Mode Starting/Stopping

1. Turn on the warmer.
2. To **start** heating, press and hold until the heating indicator turns on and blinks.
3. To **stop** heating, press and hold until the heating indicator turns off.

Adjusting the Heating Level

Press to cycle through the heat levels . The heat level can be adjusted at any time.

Low Battery Resume Heating

If battery runs low, replace battery to continue heating towards the target meal time. Warmer will automatically resume the target meal time set when battery is replaced and tool is powered on within 15 minutes.

MAINTENANCE

WARNING To reduce the risk of injury, always unplug the charger and remove the battery pack from the charger or tool before performing any maintenance. Never disassemble the battery pack, charger, or tool, except as provided in these instructions. Contact a **MILWAUKEE**® service facility for all other repairs.

Maintaining Tool

Keep this tool, battery pack and charger in good repair by adopting a regular maintenance programme. Inspect the tool for issues such as undue noise, misalignment or binding of moving parts, breakage of parts, or any other condition that may affect the tool operation. Return the tool, battery pack, and charger to a **MILWAUKEE**® service facility for repair. Depending on use, periodically have an authorised service facility inspect and maintain the tool, battery, and charger to ensure proper performance.

If the tool does not start or operate at full power with a fully charged battery pack, clean the contacts on the battery pack. If the tool still does not work properly, return the tool, charger and battery pack, to a **MILWAUKEE**® service facility for repairs.

Cleaning the tool

WARNING Always remove the battery pack any time the tool is not in use or when cleaning.

Clean dust and debris from vents. Keep handles clean, dry and free of oil or grease. Use only mild soap and a damp cloth to clean, since certain cleaning agents and solvents are harmful to plastics and other insulated parts. Some of these include petrol, turpentine, lacquer thinner, paint thinner, chlorinated cleaning solvents, ammonia and household detergents containing ammonia. Never use flammable or combustible solvents around tools.

Dishwasher Safe Parts

Container, container lid and gasket are dishwasher safe. Dry completely before use. Remove the gaskets from the tool lid and container lid when cleaning. Reinstall gaskets before use.

Repairs

For repairs, return the tool, battery pack and charger to the nearest authorised service centre.

ACCESSORIES

WARNING Use only recommended accessories. Others may be hazardous.

For a complete listing of accessories, go online to milwaukeekeetool.com.au / milwaukeekeetool.co.nz or contact an authorised distributor.

WARRANTY - AUSTRALIA and NEW ZEALAND

Please refer to Australian and New Zealand warranty supplied with tool. This warranty applies only to product sold by authorised dealers in Australia and New Zealand.

SERVICE - AUSTRALIA and NEW ZEALAND

MILWAUKEE® prides itself in producing a premium quality product that is Nothing But Heavy Duty™. Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact your authorised **MILWAUKEE®** dealer.

For a list of **MILWAUKEE®** dealers, guarantee or service agents please contact **MILWAUKEE®** Customer Service or visit our website.

(Australia Toll Free Telephone Number 1300 645 928)

(New Zealand Toll Free Telephone Number 0800 645 928)

or visit milwaukeeetool.com.au/milwaukeeetool.co.nz.

Milwaukee Electric Tool Corporation

13135 West Lisbon Road, Brookfield, Wisconsin U.S.A. 53005

Milwaukee Tool (Australia)

26 - 40 Nina Link, Dandenong South,
Victoria, 3175, Australia

Milwaukee Tool (New Zealand)

59 Hugo Johnston Drive, Penrose,
Auckland, 1061, New Zealand

DESIGNED BY MILWAUKEE ELECTRIC TOOL CORP.