



IMPORTANT SAFETY INSTRUCTIONS

⚠WARNING READ AND UNDERSTAND ALL INSTRUCTIONS. Failure to follow all instructions listed below, may result in electric shock, fire and/or serious personal injury.

1. **SAVE THESE INSTRUCTIONS - THIS OPERATOR'S MANUAL CONTAINS IMPORTANT SAFETY AND OPERATING INSTRUCTIONS.**
2. **THIS DEVICE IS DESIGNED TO BE POWERED BY (1) CR2032 BATTERY PROPERLY INSERTED.** Do not attempt to use with any other voltage or power supply.
3. **CHEMICAL BURN HAZARD. KEEP BATTERIES AWAY FROM CHILDREN.**
4. **THIS DEVICE CONTAINS A LITHIUM BUTTON/COIN CELL BATTERY. A NEW OR USED BATTERY CAN CAUSE SEVERE INTERNAL BURNS AND LEAD TO DEATH IN AS LITTLE AS 2 HOURS IF SWALLOWED OR ENTERS THE BODY.** Always secure the battery cover. If it does not close securely, stop using the device, remove the batteries, and keep it away from children. If you think batteries may have been swallowed or entered the body, seek immediate medical attention.
5. **INSTALL BATTERY ACCORDING TO POLARITY (+ / -) DIAGRAMS.**
6. **PROPERLY DISPOSE OF USED BATTERIES IMMEDIATELY.**
7. **DO NO INCINERATE OR DISMANTLE BATTERIES.**
8. **UNDER ABUSIVE CONDITIONS, LIQUID MAY BE EJECTED FROM THE BATTERY, AVOID CONTACT. IF CONTACT ACCIDENTALLY OCCURS, FLUSH WITH WATER. IF LIQUID CONTACTS EYES, ADDITIONALLY SEEK MEDICAL HELP.** Liquid ejected from the battery may cause irritation or burns.
9. **DO NOT DISPOSE OF DEVICE OR BATTERIES TOGETHER WITH HOUSEHOLD WASTE MATERIAL!** Appliance and batteries that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.



SYMBOLGY

- V** Volts
- Read operator's manual.
- ==** Direct Current

SPECIFICATIONS

Cat. No.	ONET
Volts	3VDC
Battery Type	CR2032
Battery Life	1 yr
Recommended Ambient Operating Temperature	-28°C to 60°C
Signal Range	≥ 30.5m (100')
Ingress Protection	IP67
Impact Protection	IK08

GENERAL USE AND CARE

Coincell Battery

Before first use, remove the plastic tab from between the battery and contacts. Discard the plastic tab and replace the cap. Remove the clear protective backing from the back of the TICK™.

If the TICK™ will not be used for a long time, remove the battery as a protection against corrosion.

1. Open the TICK™ Tracking Device by rotating the cover.
2. Remove the CR2032 coin cell battery.
3. Remove the clear protective film (first time only).
4. Replace the CR2032 coin cell battery, positive (+) side up.
5. Replace cover and rotate to lock.
6. Remove the clear protective backing on the bottom of the Tick (first time only).

QUICK START GUIDE

ACTIVATING THE TICK™

1. Download ONE-KEY™ app and log in
2. Remove protective cover from battery and back of TICK
3. Add or select item from app inventory
4. Tap ASSOCIATE TICK™ button in app and follow steps to activate TICK
5. Attach TICK™ to item and start tracking

OPENING THE TICK™

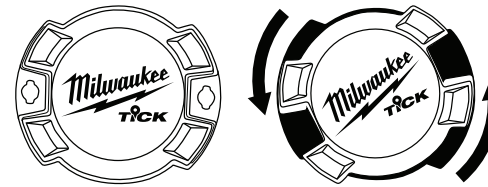


Fig. A ROTATE LID

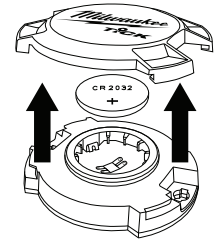


Fig. B REMOVE COVER AND BATTERY

WARRANTY - AUSTRALIA and NEW ZEALAND

Please refer to Australian and New Zealand warranty supplied with tool. This warranty applies only to product sold in Australia and New Zealand.

SERVICE - AUSTRALIA and NEW ZEALAND

MILWAUKEE® prides itself in producing a premium quality product that is Nothing But Heavy Duty®. Your satisfaction with our products is very important to us! If you encounter any problems with the operation of this tool, please contact your authorised MILWAUKEE® dealer.

For a list of MILWAUKEE® dealers, guarantee or service agents please contact MILWAUKEE® Customer Service or visit our website. (Australia Toll Free Telephone Number 1300 645 928) (New Zealand Toll Free Telephone Number 0800 279 624) or visit www.milwaukeetools.com.au / www.milwaukeetools.co.nz.

Milwaukee Electric Tool Corporation

13135 West Lisbon Road, Brookfield, Wisconsin U.S.A. 53005

Milwaukee Electric Tool Corporation (Australia)

Techtronic Industries (Australia) Pty. Ltd.
Rowville, Victoria, Australia, 3178

Milwaukee Electric Tool Corporation (New Zealand)

Techtronic Industries (New Zealand) Pty. Ltd.
Mangere, Auckland, New Zealand, 2022

Professionally made in China for Milwaukee Electric Tool Corporation

ONE-KEY™ App / Account Set Up

1. To download the ONE-KEY™ app, visit the App Store or Google Play from your smart device.
2. Create a Username and Password and log in to a ONE-KEY™ account.
3. Bluetooth and Location Services must be enabled on the mobile device.
4. Location Services must be enabled in the Settings section of the App.

Activating the TICK™

1. Select or add a new item in "Inventory" to be tracked using the TICK™.
2. Select the red "Associate Tick" button on the Inventory Item Detail screen.
3. Follow the instructions on the screen.
4. Select "Start Scan". The App will scan for TICKs in range. If there are too many in range, move the others at least 90cm away.
5. Once the App has paired a TICK™ with the Inventory Item, tracking can begin.

NOTE: If the device receives a sharp blow or impact, it may need to be paired again.

Installing the TICK™

The TICK™ is designed to track tools and equipment using the ONE-KEY™ App. It will not prevent theft from happening. The TICK™ can be installed in a variety of orientations. Consider installing the Tick™ to prevent tampering.

Be sure battery door can be removed once installed. The Tick™ can be installed using the following attachment options

- #8 Pan Head Self Tapping Screw
- 5/32 Diameter Rivet
- Cable or Zip Tie
- Glue or Epoxy
- Adhesive Backing
- Keyring

WARNING! Do not secure in such a way as to impede the safe use of the product.

Do not attach on or near the following:

- vents
- safety notifications
- hand holds
- areas exposed to sparks or heat
- moving parts
- guards
- switches or controls

Before using screws or rivets, ensure the space behind the placement is clear.

Care

- Clean with a damp, soft cloth.
- Never use aggressive cleaning agents or solvents.